



**TRU-FRAME®**  
A name you can build on.

## TRU-SLIDE™ ADJUSTABLE SLIDING SCREEN DOOR INSTALLATION INSTRUCTIONS

The only tool you will need to install your TRU-SLIDE™ is a Phillips head screw driver.  
This will be used on screws for adjustment channels and for mounting the latch strike plate.

**STEP #1** - Loosen the four screws in the top and bottom adjustment channels.

**STEP #2** - Place top of TRU-SLIDE™ in the header slot (Figure A) or on fin (Figure B). Be sure handle latch is facing inside of room. Then lift bottom of door and place wheels on bottom track.

**STEP #3** - Slide TRU-SLIDE™ in closed position. Tighten both screws on the bottom channel. Adjust bottom channel to align rail even with the existing jamb.

**STEP #4** - Lower the top channel slightly until TRU-SLIDE™ slides freely, then tighten top screws.

**STEP #5** - If the bug-sweep provided is too wide, then tear off excess as shown. (Figure C)

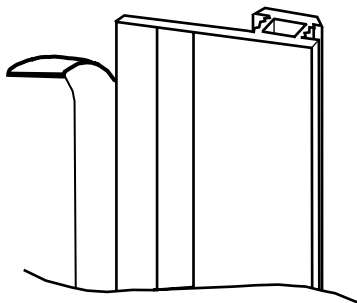


Figure C

**STEP #6** - Secure the strike to the existing door jamb as shown (Figure D). It can be adjusted up or down so as to catch the TRU-SLIDE™ latch.

**NOTE:** DEPENDING ON WHICH DIRECTION YOUR DOOR SLIDES, THIS ILLUSTRATION MAY NEED TO BE REVERSED.

### CARE & MAINTENANCE

Your TRU-SLIDE™ Screen Door should be cleaned as necessary with a mild soap and water solution. The wheel assemblies are designed so as not to need lubrication. Any parts which may wear out or be damaged can be purchased from your TRU-FRAME® dealer.

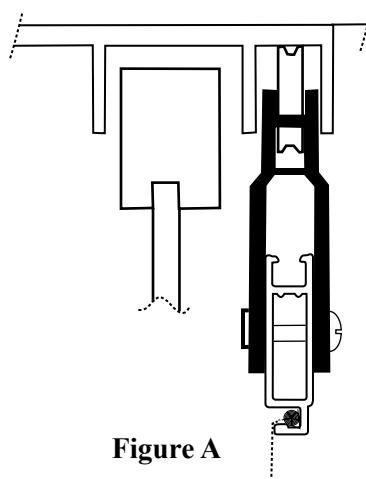


Figure A

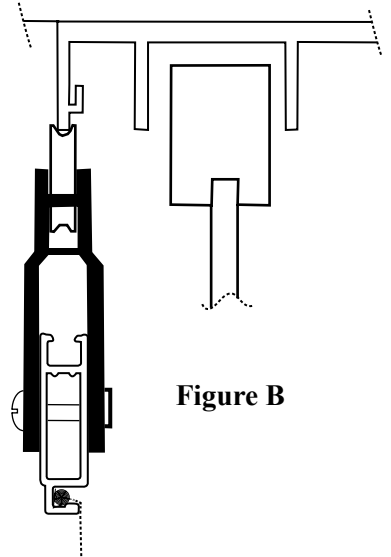


Figure B

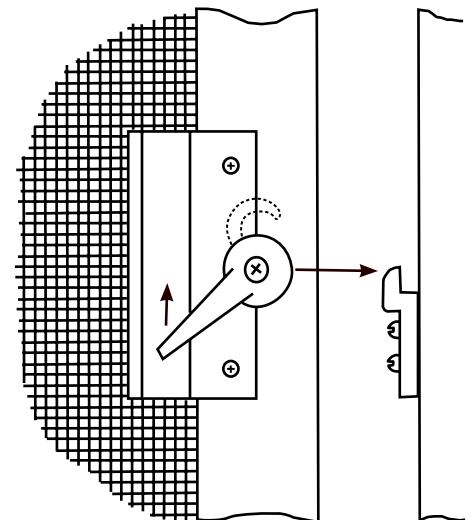


Figure D (Inside View)